


## ANEMOMETER

The **L7101** self-contained battery-operated Anemometer measures wind speed and direction and includes a cup and vane assembly. The outdoor parts are corrosion-resistant and are furnished with a mahogany-finished indoor indicating unit 6-1/2" x 5". Also included is 60' of lead-in wire and instructions.



MODELS	DESCRIPTION
L7101	ANEMOMETER

## RAIN GAUGE

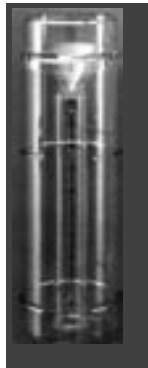

The **L7181** Rain Gauge features a Butyrate cylindrical case with inner receiver. The gauge is graduated to one inch with overflow slot up to 11" rainfall. A mounting bracket is furnished and the funnel has a 4-1/8" diameter opening and is 14" long. Furnished with a 5 year supply of recording sheets.

MODELS	DESCRIPTION
L7181	RAIN GAUGE, 11" CAPACITY

## PSYCHROMETER

Psychrometer is a hydrometer that uses the difference in readings between two thermometers. The first thermometer utilizes a wet bulb ventilated to cause evaporation and the other has a dry bulb to measure atmospheric moisture. The **L7241** and **L7242** sling psychrometer has two 9-1/2" mercury filled thermometers mounted on a stainless back and a swivel type handle. Also furnished is a wick and humidity tables. The **L7245** and **L7246** pocket sling psychrometer has two 5-1/2" mercury filled lens front thermometers attached to a metal back with a handle for whirling. Supplied with humidity tables, wick, and a pocket case.



MODELS	DESCRIPTION	RANGE
L7241	SLING PSYCHROMETER	20° - 120° F
L7242		30° - 50° C
L7245	POCKET SLING PSYCHROMETER	20° - 110° F
L7246		-5° - 45° C